



Congratulations on your purchase of a compact Foil-Flator, the only electric inflator/deflator for foil balloons.

Before Use:

- Keep dry (recommended for indoor use only).
- Operate only on a hard flat surface (avoid tablecloths).
- Ensure unit matches available power supply.

The CSA, UL and CE approved Foil-Flator is available in 120V, 230V and 240V versions.

Note: Limit continuous use to 20 minutes.

Inflation:

The Foil-Flator's precise inflation pressure helps prevent breakage from over-inflation and stress to self-sealing balloon valves that can cause air leakage over time.

1. Fit hose over lower opening and attach short inflation nozzle (as seen in photo).
2. Insert nozzle into foil balloon valve and turn machine on.
3. Remove nozzle when balloon is full.
4. OPTIONAL: For the longest-lasting displays, cover valve opening with clear Jiffy Tape.

Deflation:

The Foil-Flator deflates both helium and air-filled foil balloons, so they can be reused for repeated savings.

1. Fit hose over top opening and attach long deflation nozzle.
2. Carefully insert the straw portion all the way into the valve and turn the machine on.
3. When the balloon is deflated, turn machine off.
4. Detach nozzle from hose BEFORE removing the nozzle from the balloon (breaking the suction in this manner prevents unintended valve extraction).



Clik-Click Systems Inc.

Tel: 519-752-6628 / 1-866-298-9684 • Fax: 519-757-0285 / 1-866-298-9685

Email: sales@Clik-Click.com • Web: www.Clik-Click.com

Canada: 218 Hachborn Road, Brantford, Ontario, Canada N3S 7W5

USA: 2299 Kenmore Avenue, Buffalo, NY 14207